


CONTENTS

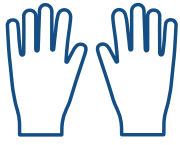

Gloves
x1




Cable Ties
x100



Fasteners
x100





Installation
Guide

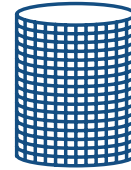


304 Stainless Steel
PVC Coated Mesh
205mm(H) x 30m(L)

PREPARATION

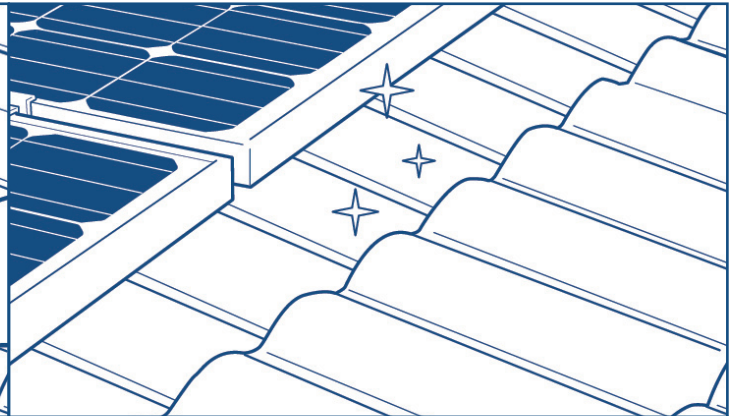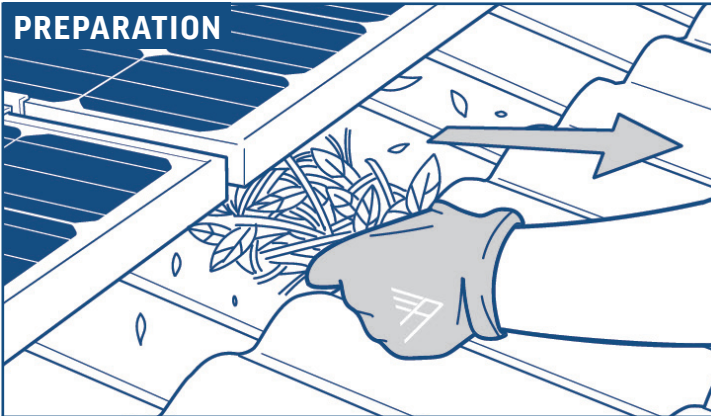


Clean out all dirt, debris and leaves underneath the solar panel cavity.


INSTRUCTIONS

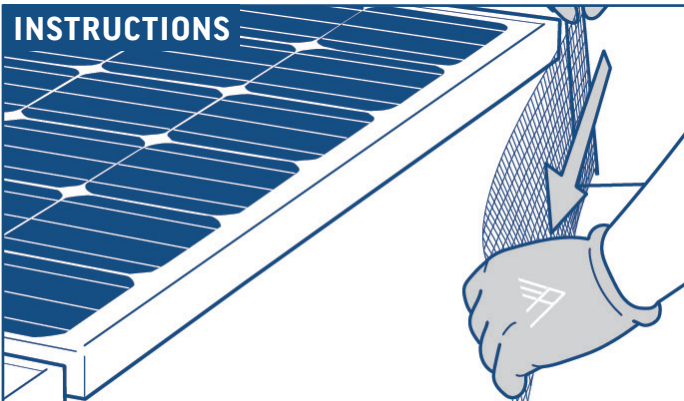


Roll out the mesh and align the top edge of the mesh along the side of the solar panel.

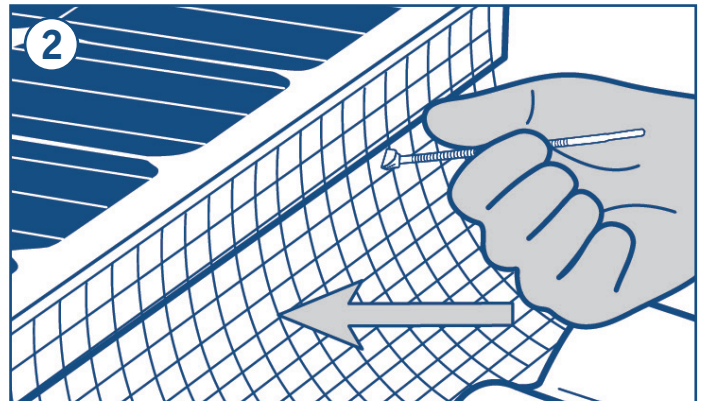


Insert the head of the fastening rod through the first mesh grid below the panel frame.

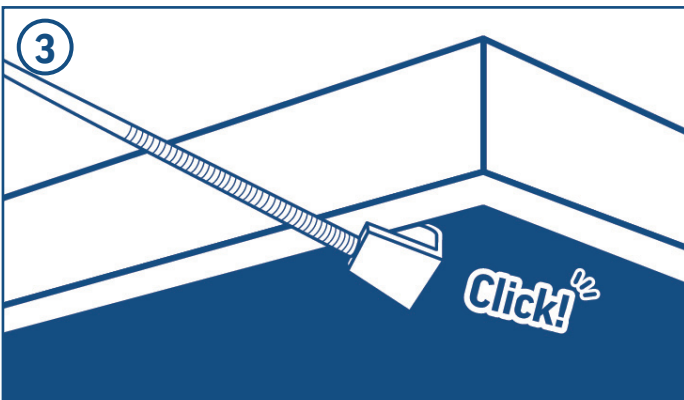


Hook the fastening rod to the underside of the solar panel frame. It will have a "Click" sound once it's engaged.

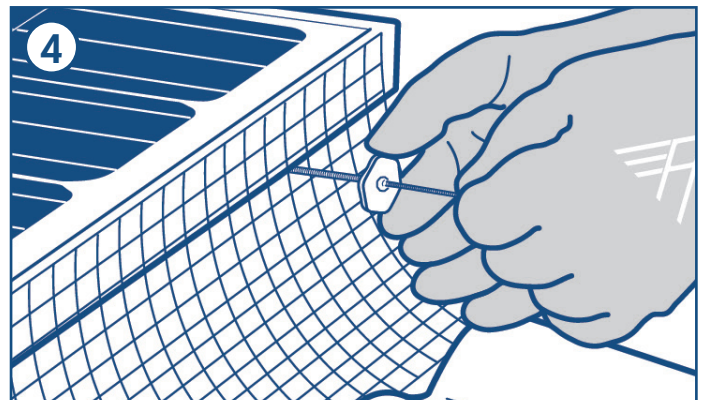


Slide the locking disc onto the rod and push firmly to secure the mesh tightly.

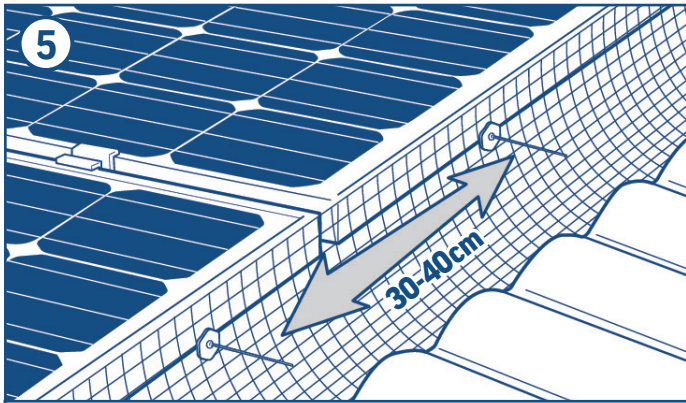


Place fastening clips every 30-40cm along the perimeter.

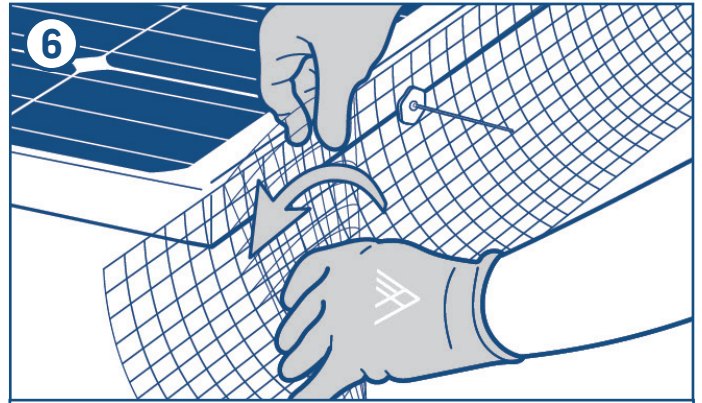


Roll out 30cm of mesh past the corner and fold in half back onto the corner, fold access flap diagonally to secure.

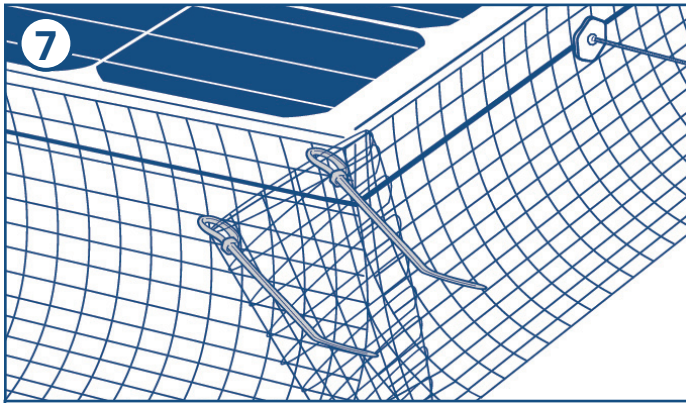


Secure the folded flap against the mesh with a couple of cable ties.

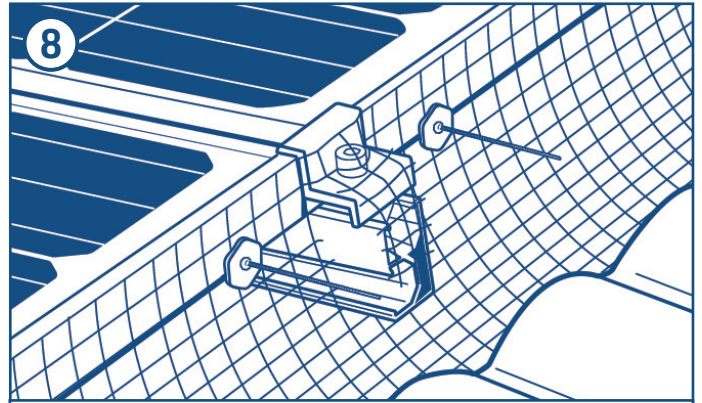

Cut out the shape of the protruding obstacle so the mesh sits flush against the panel without leaving any gaps.

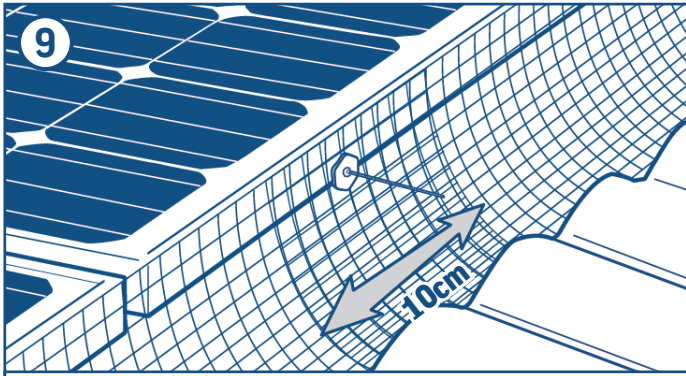

Overlap the start with approximately 10cm mesh to completely wrap the perimeter. Secure with cable ties and insert a fastener through the overlapped pieces and cut away any excess mesh.

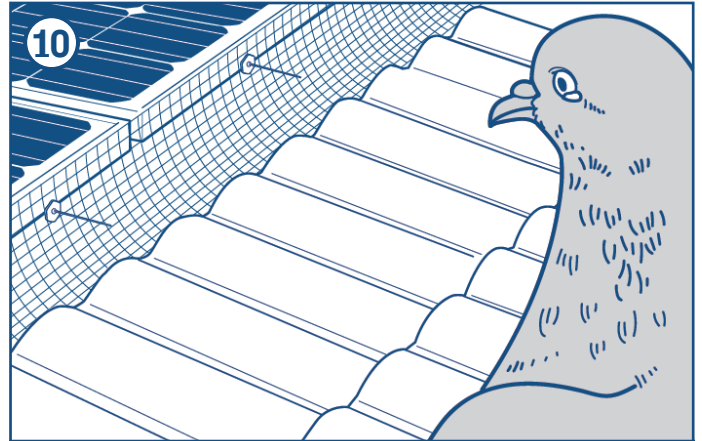

Now you and the birds can appreciate your hard work.

Still Unsure? Get A Professional.


www.vexo.com.au/find-an-installer/

WARRANTY

Solarguard Pro[®] has a 6 year manufacturer's warranty against faulty or defective parts only.

Warranty does not cover incorrect installation or mishandling of parts.

VEXO.COM.AU

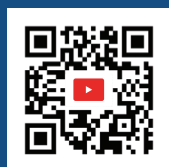

SCAN TO WATCH
TUTORIAL